



pininfarina

Wiring Diagrams



International Automobile Importers, Inc.

PRODUCED

BY


International Automobile Importers, Inc.

The wiring diagrams appearing in this book are not binding. Pininfarina reserves the right to make at any time any changes or modifications to the characteristics of the automobile without necessarily bringing this book up-to-date.


TABLE OF CONTENTS

Circuits	Page
Charging, power distribution, ignition, starting and radiator cooling fan circuits	1
Fuel injection circuit	2
Low and high beam circuit	3
Turn signal, hazard, back up, stop lights and accessory socket circuits	4
Side marker, parking, license, instrument panel and trunk lights and cigarette lighter circuits	5
Instruments, indicators and fiber optic light source circuits	6
Digital clock, remove key warning, seatbelt and courtesy light circuits	7
Horn, windshield wiper/washer, trunk opener and heater circuits	8
Radio, power window and exhaust gas sensor indicator circuits	9
Air conditioning circuit	10
Connector codes	11
Component and relay identification	13


CHARGING, POWER DISTRIBUTION, IGNITION, STARTING AND RADIATOR COOLING FAN CIRCUITS

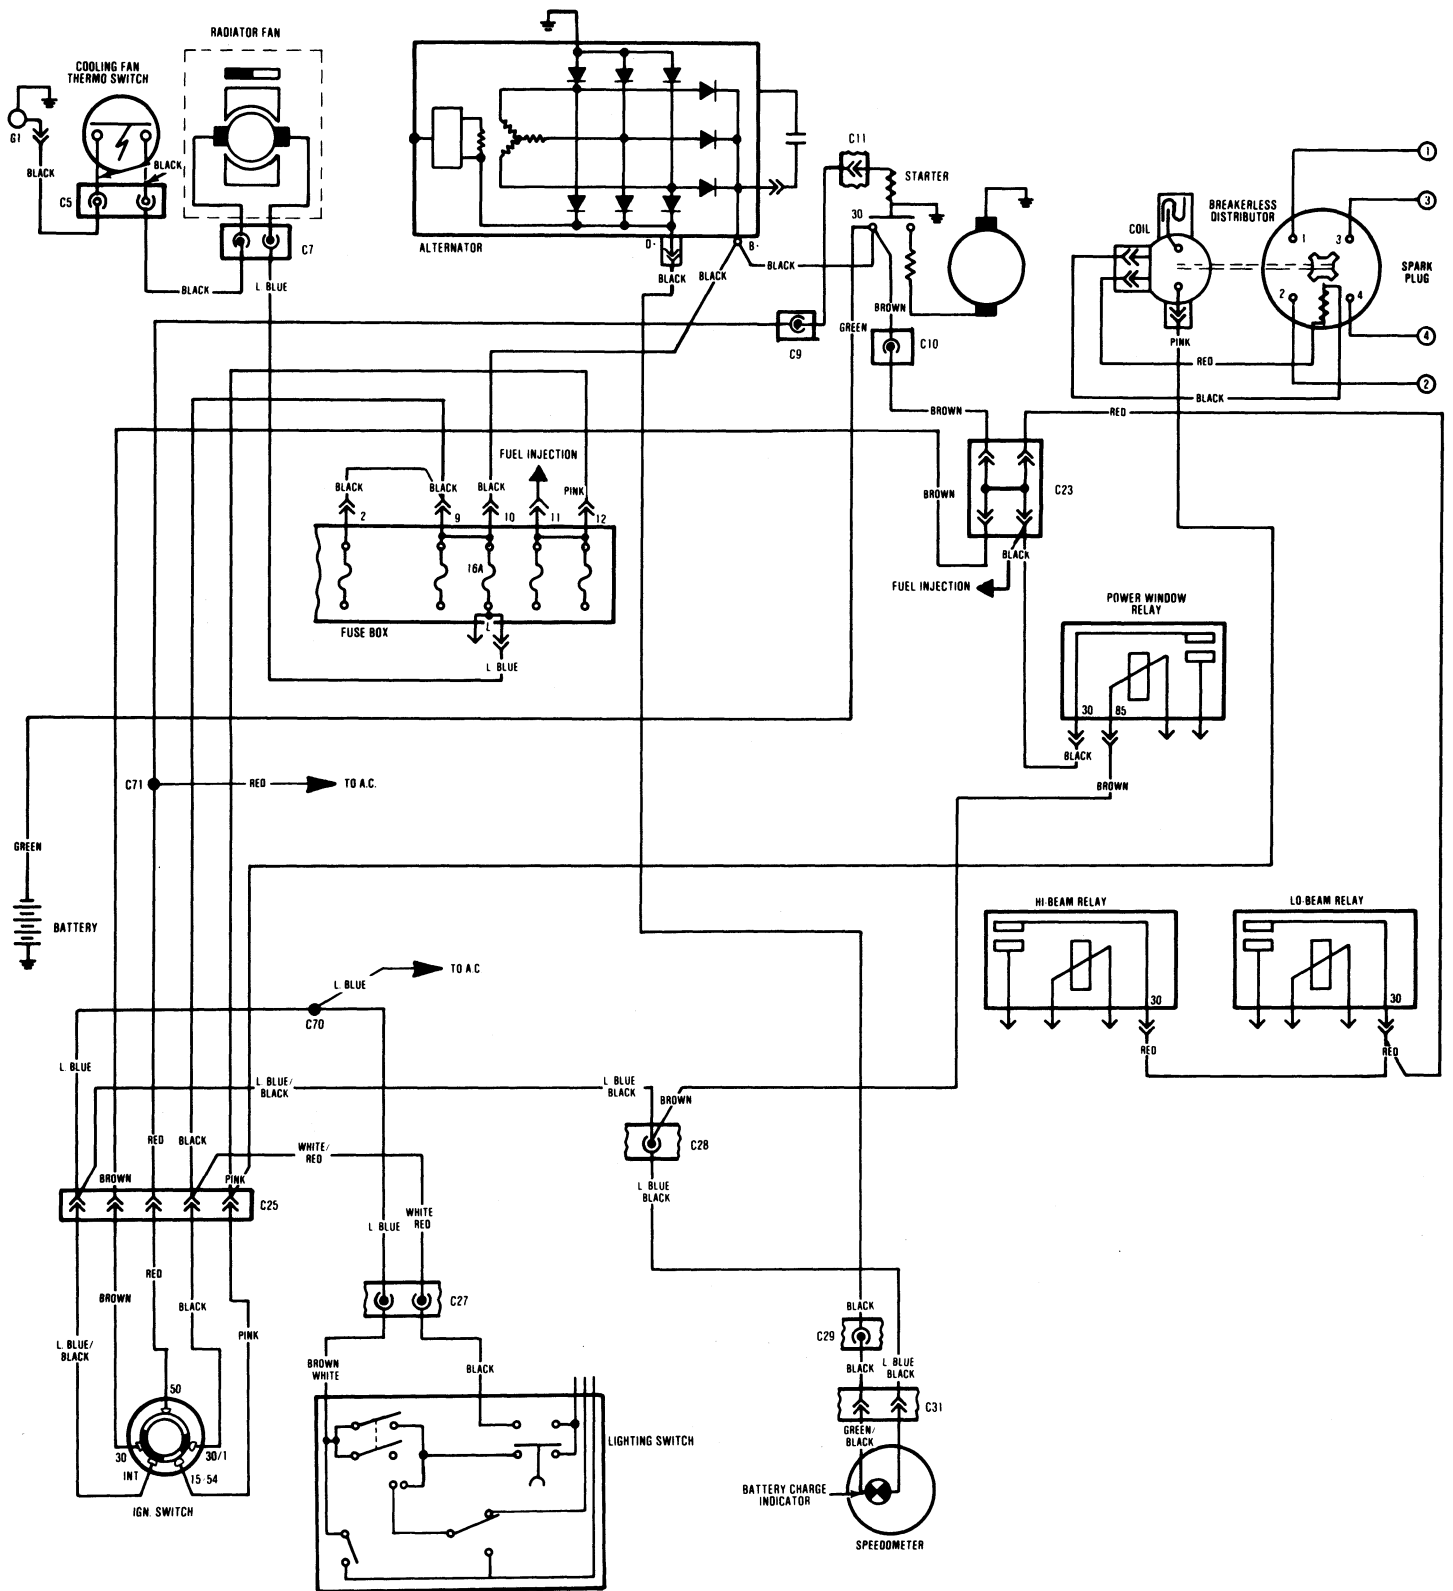


FUEL INJECTION CIRCUIT

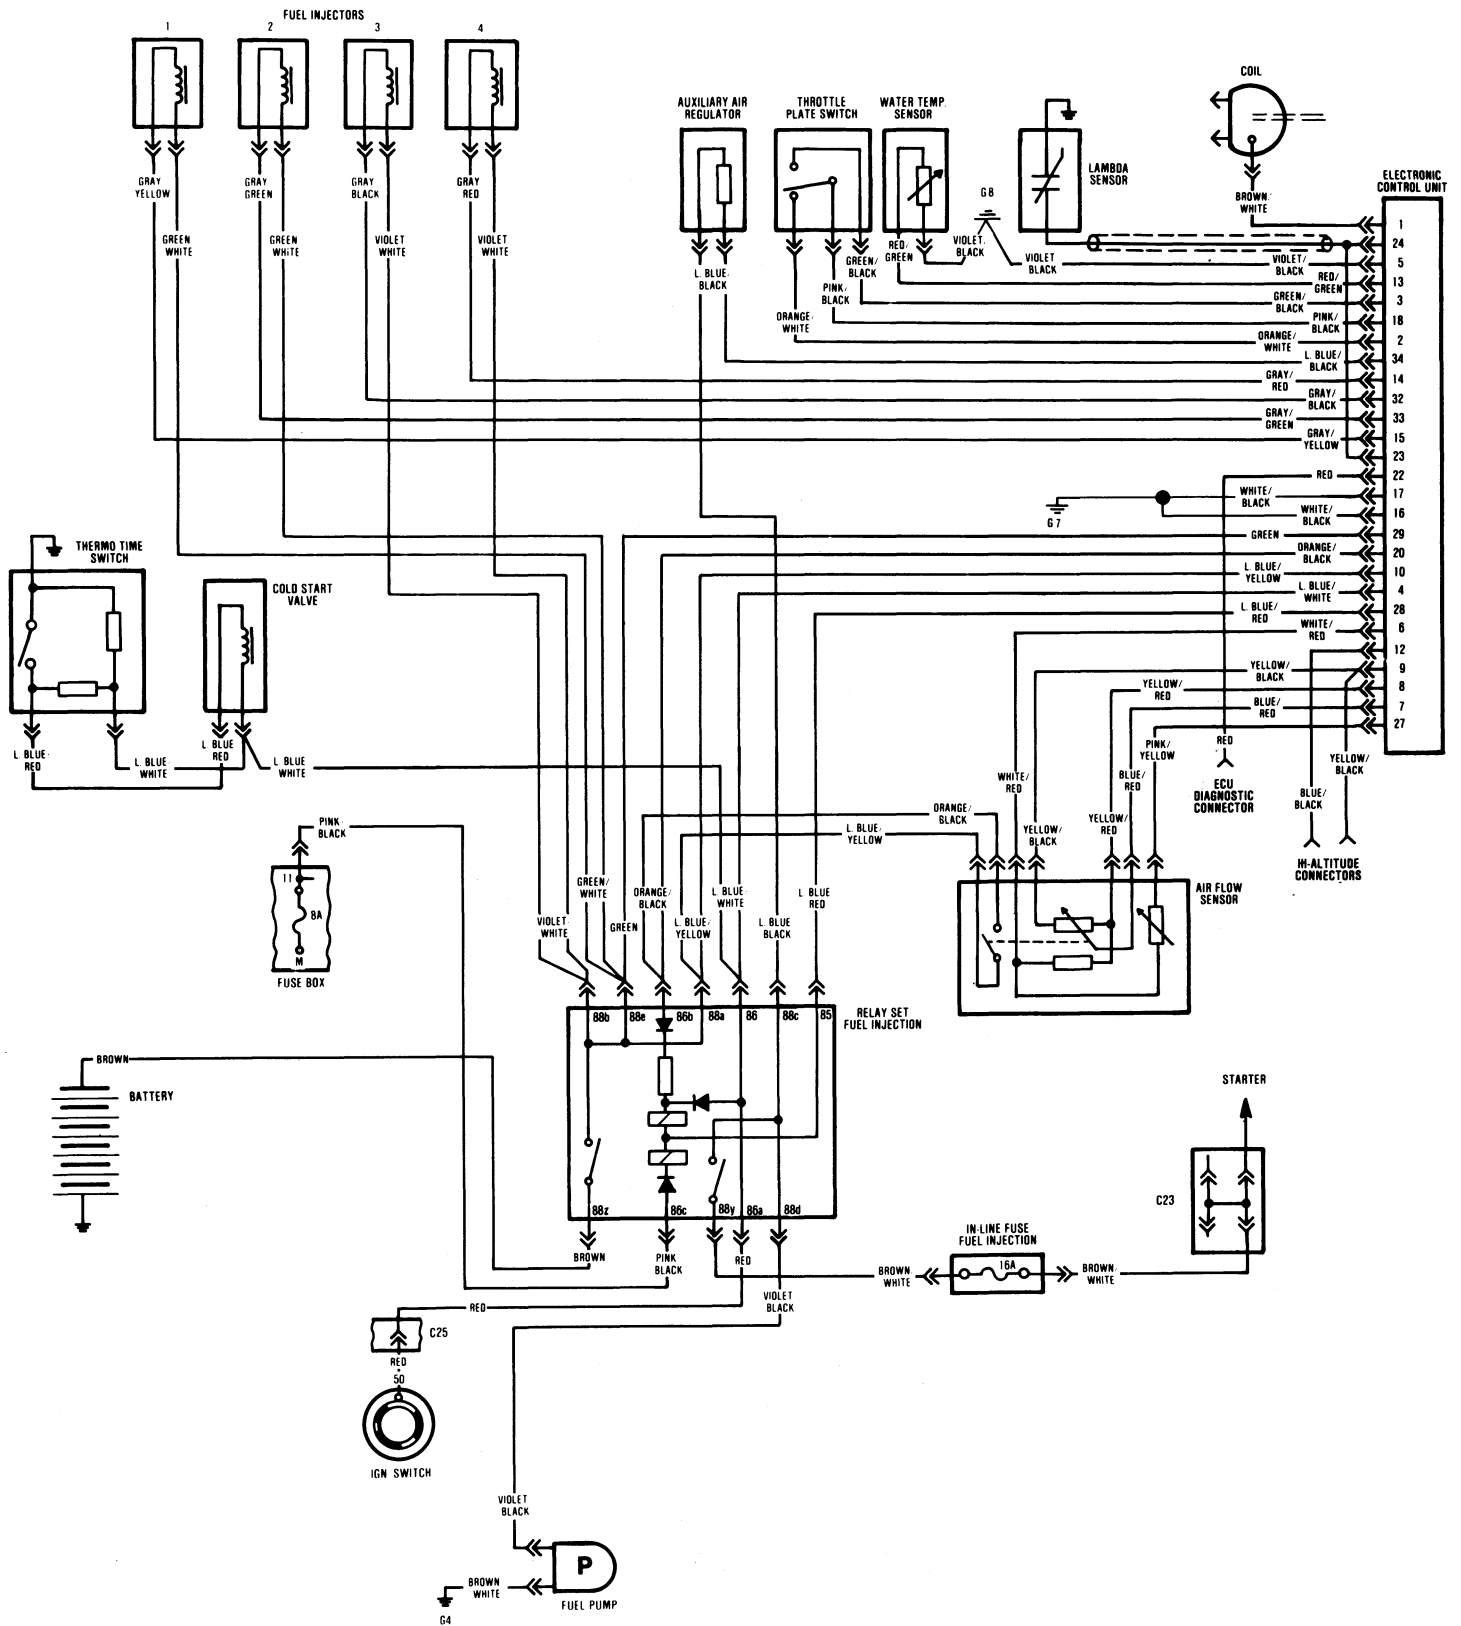


LOW AND HIGH BEAM CIRCUIT

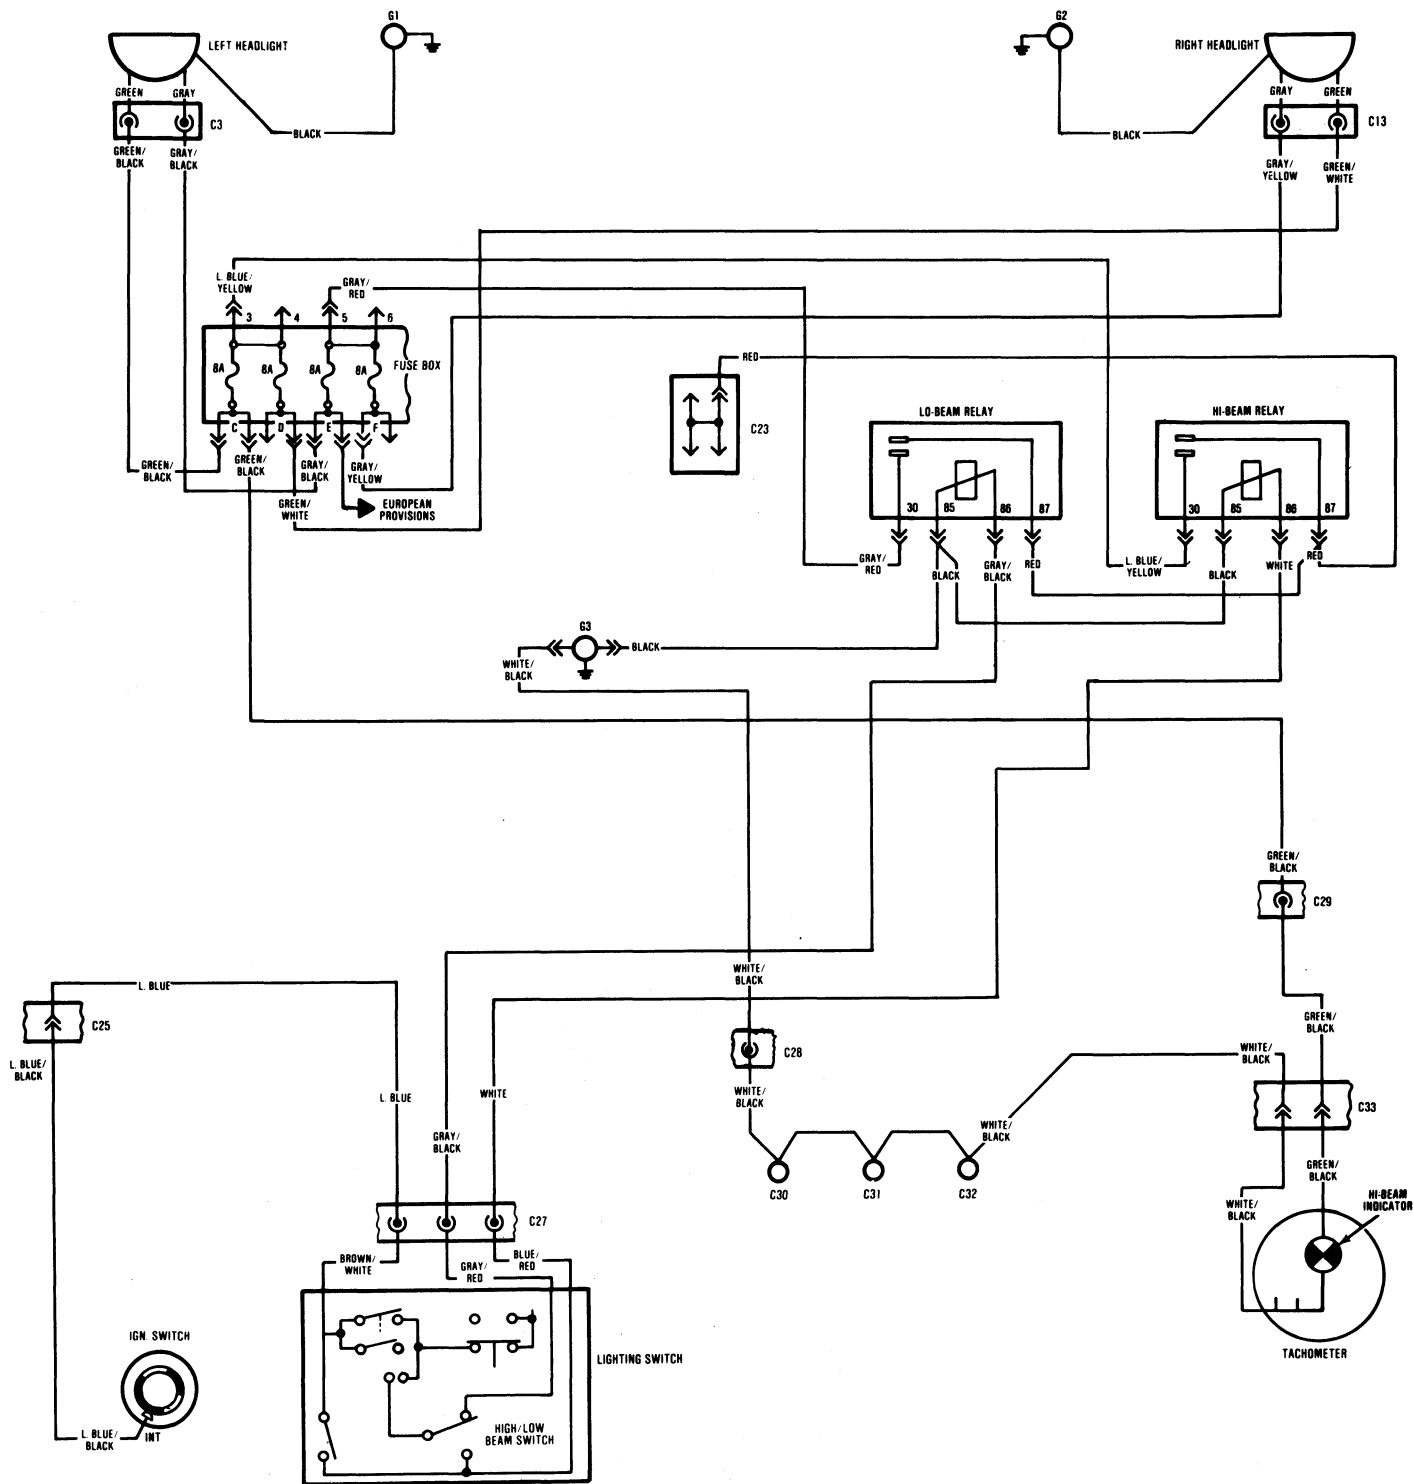


TURN SIGNAL, HAZARD, BACK UP, STOP LIGHTS, AND ACCESSORY SOCKET CIRCUITS

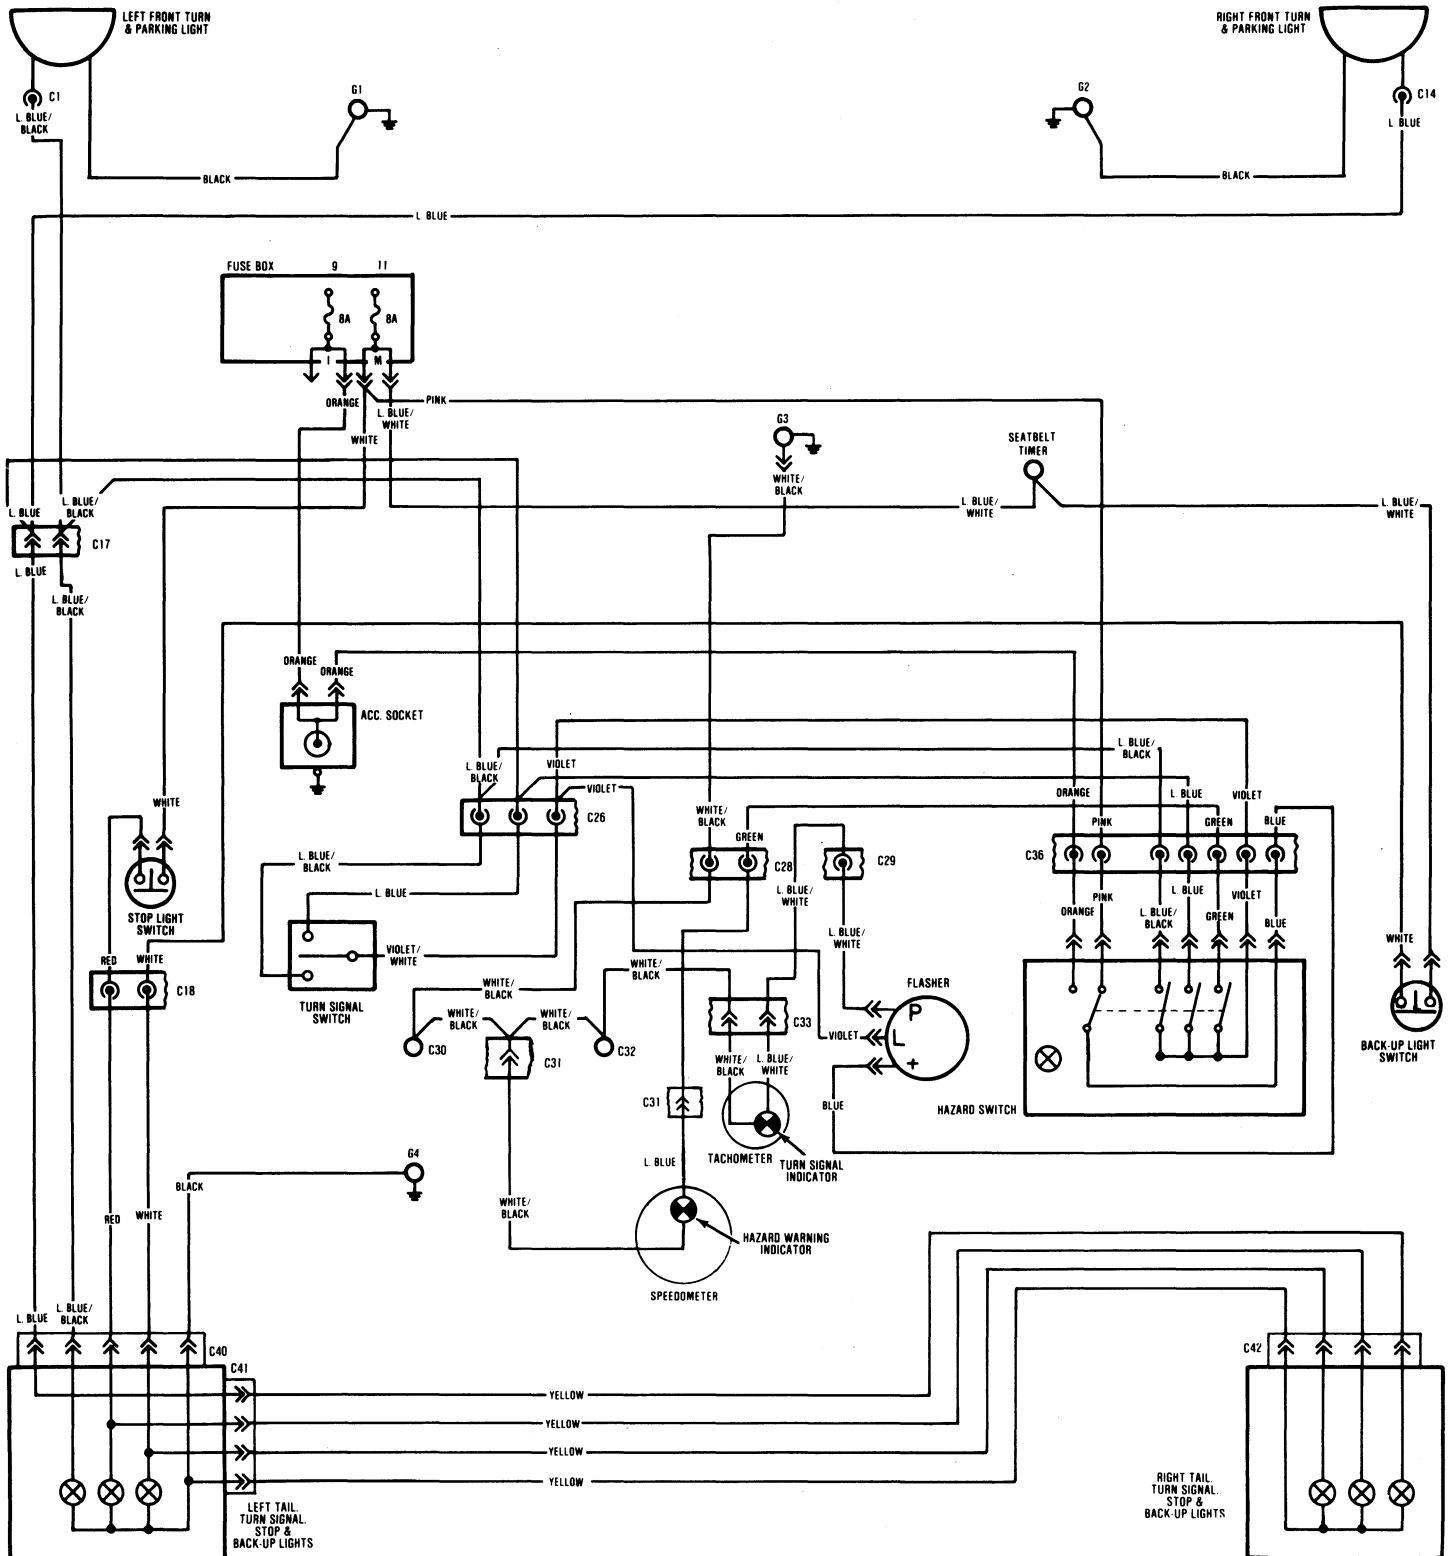


SIDE MARKER, PARKING, LICENSE, INSTRUMENT PANEL, AND TRUNK LIGHTS AND CIGARETTE LIGHTER CIRCUITS

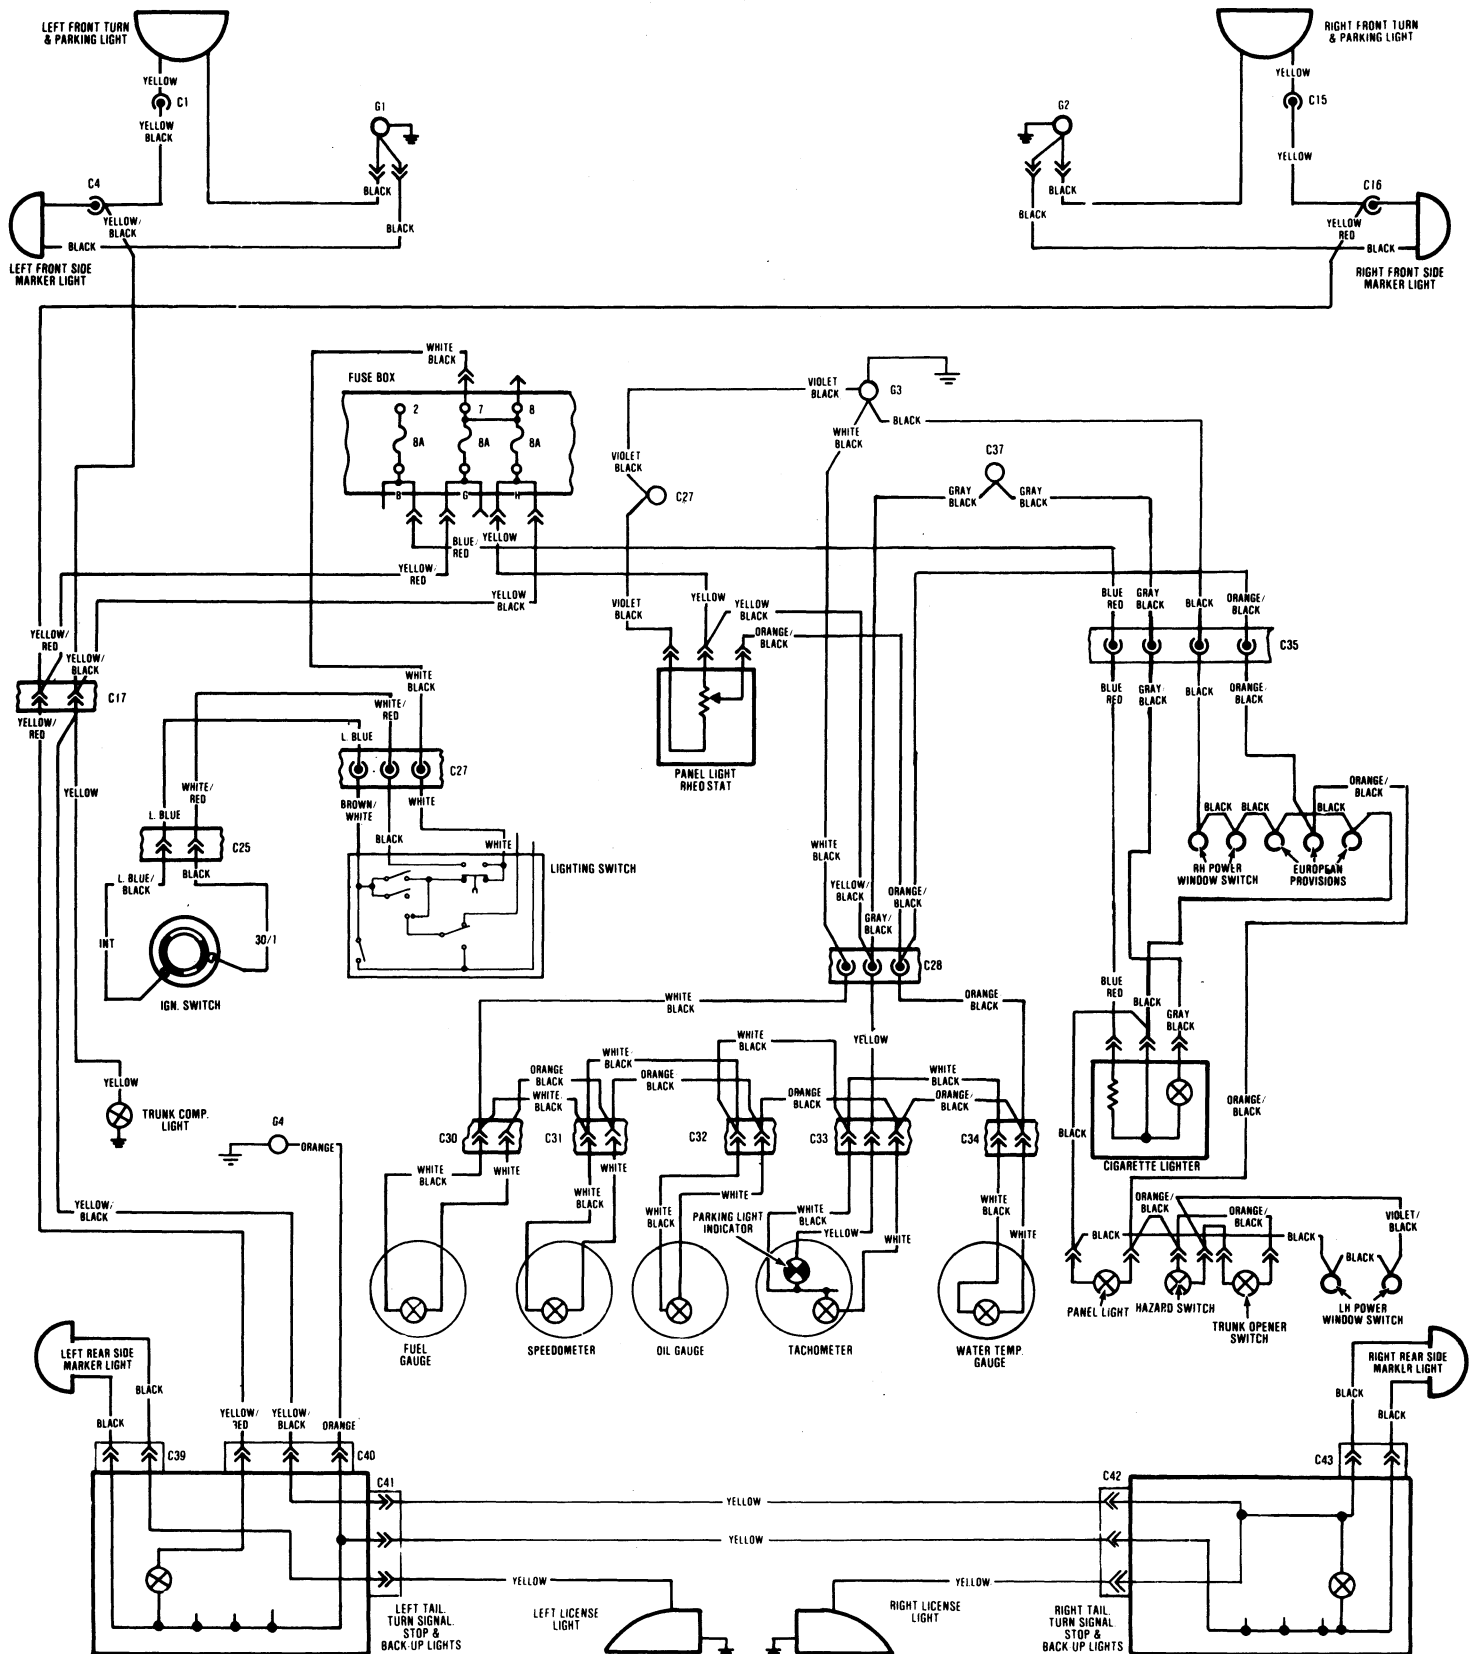


INSTRUMENTS, INDICATORS AND FIBER OPTIC LIGHT SOURCE CIRCUITS

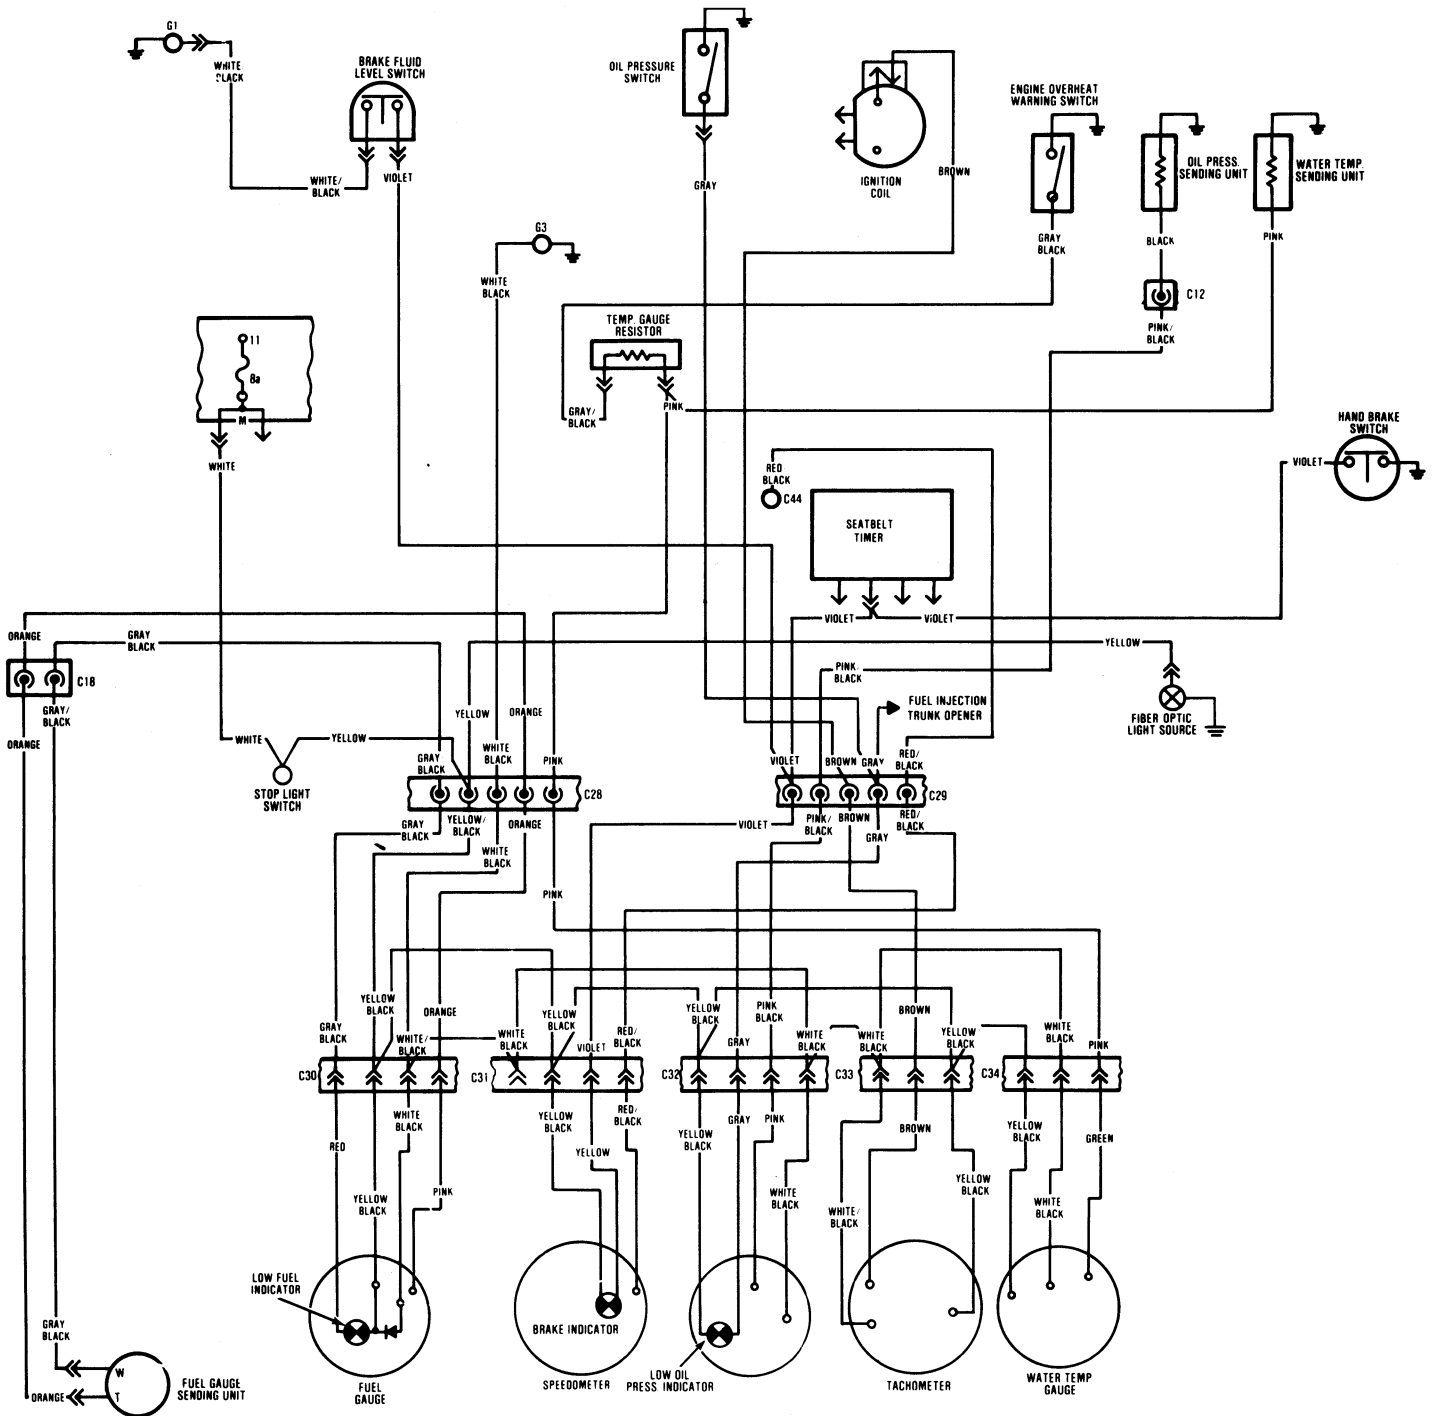


DIGITAL CLOCK, REMOVE KEY WARNING, SEATBELT AND COURTESY LIGHT CIRCUITS

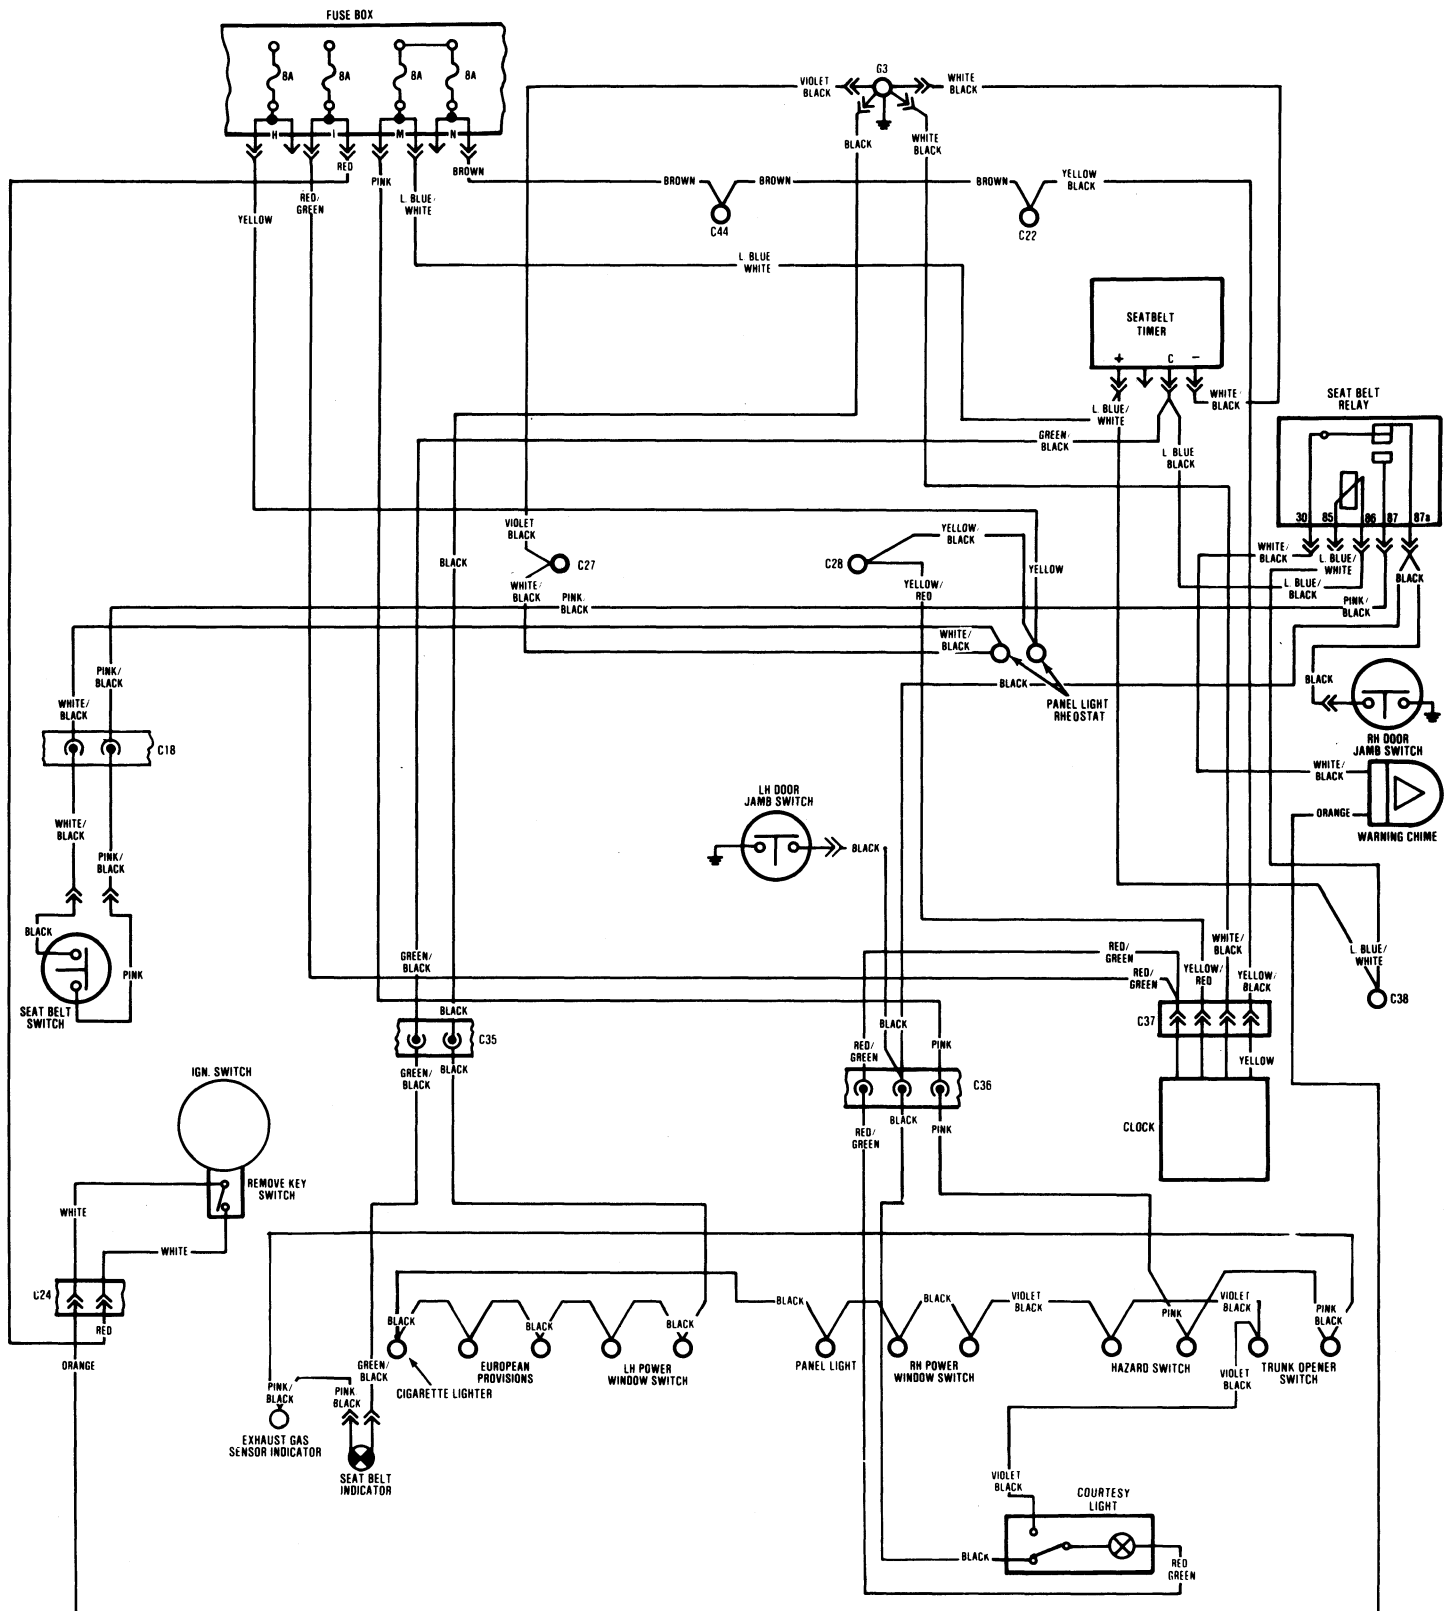


HORN, WINDSHIELD WIPER/WASHER, TRUNK OPENER AND HEATER CIRCUITS

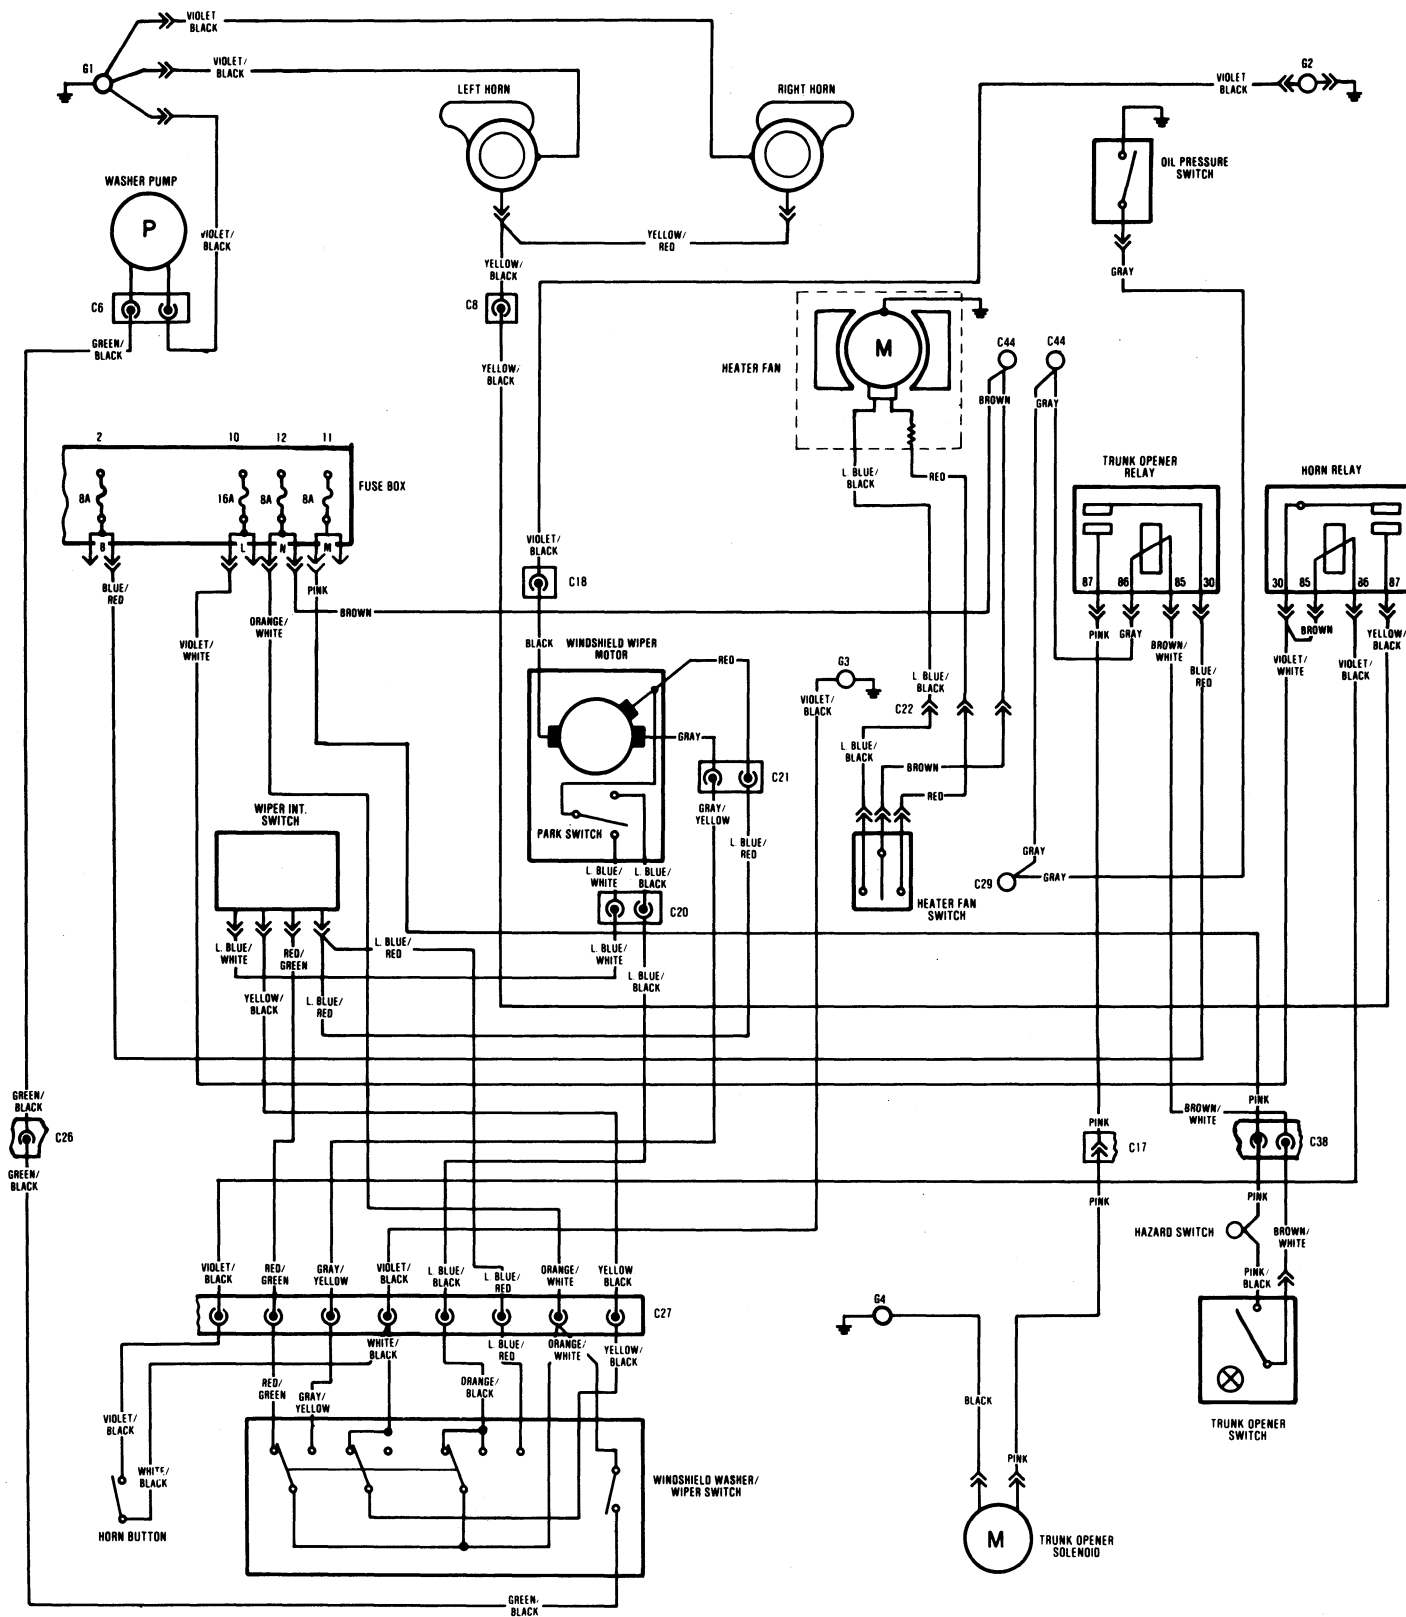

RADIO, POWER WINDOW AND EXHAUST GAS SENSOR INDICATOR CIRCUITS

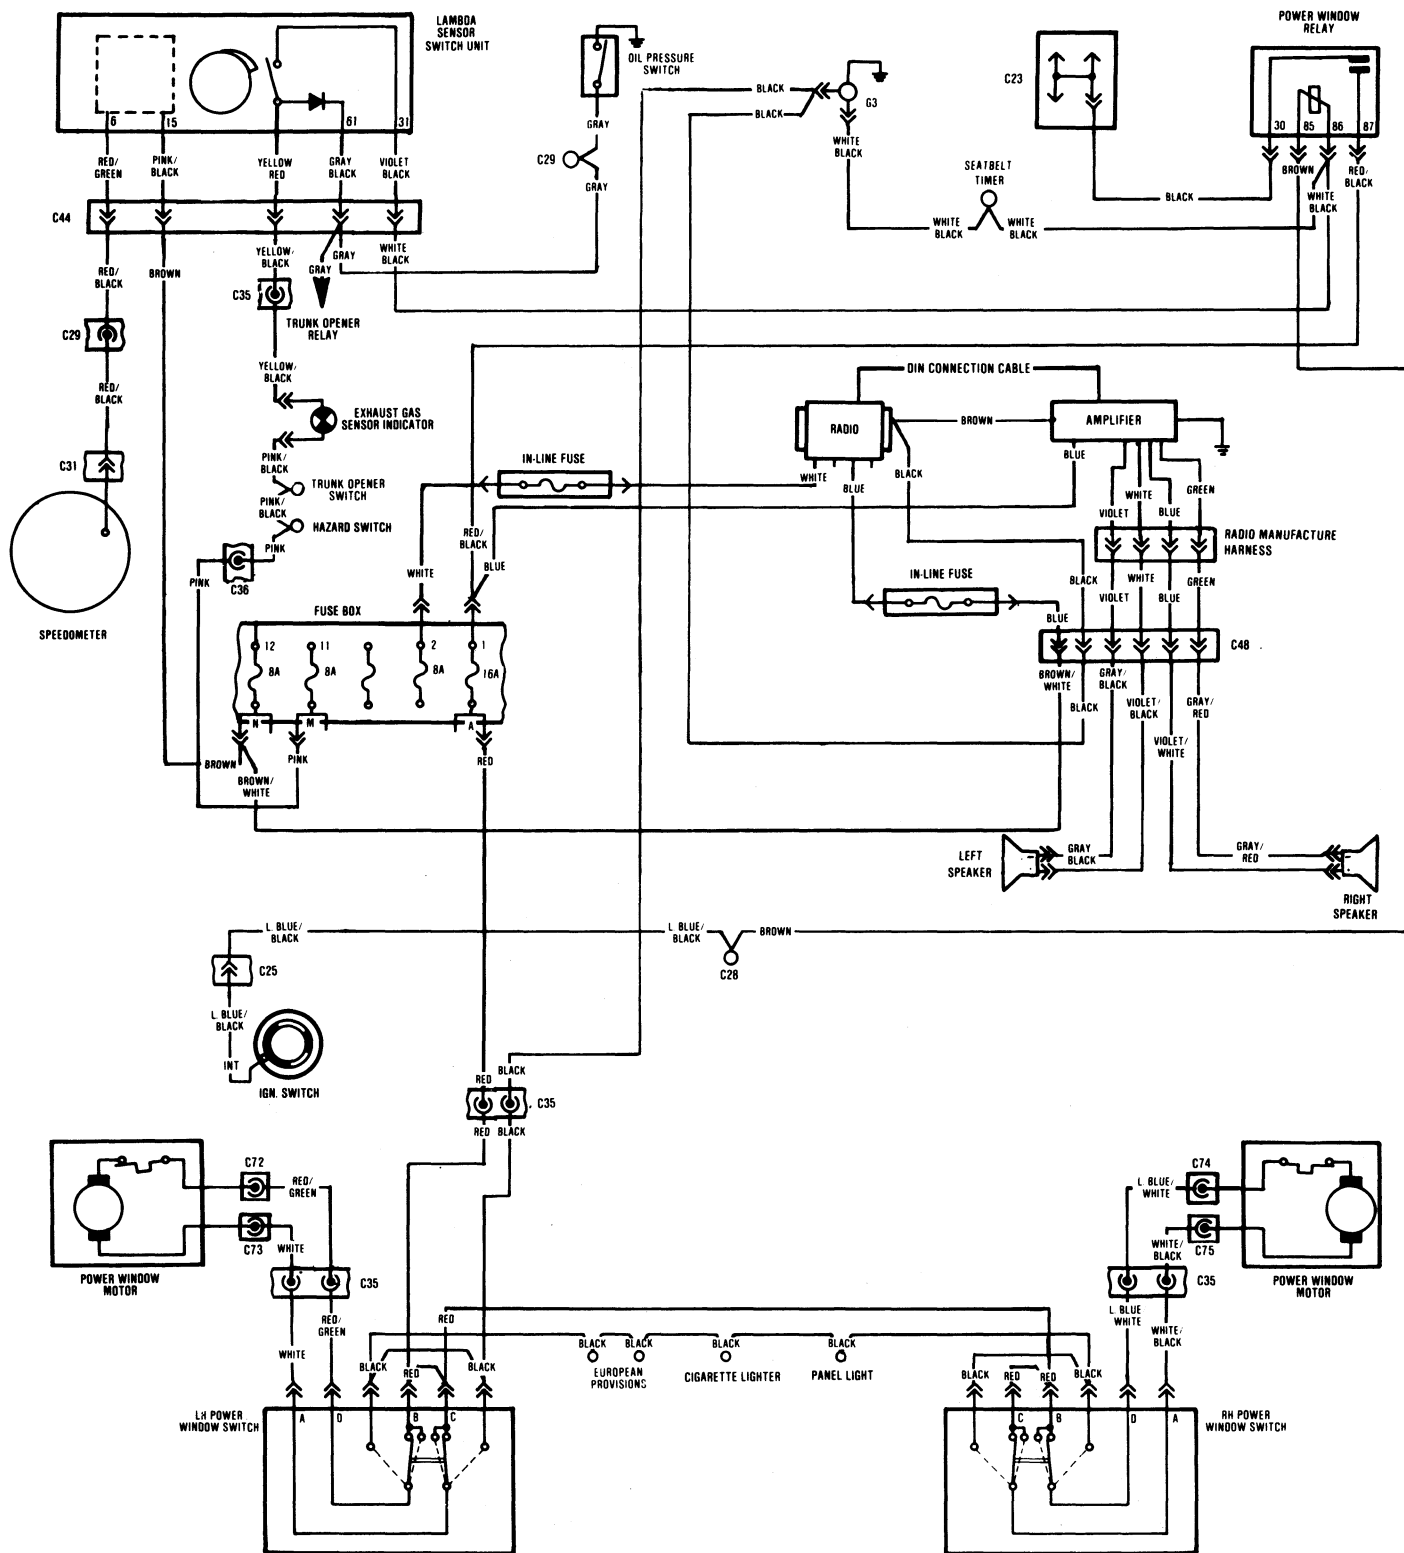

AIR CONDITIONING CIRCUITS

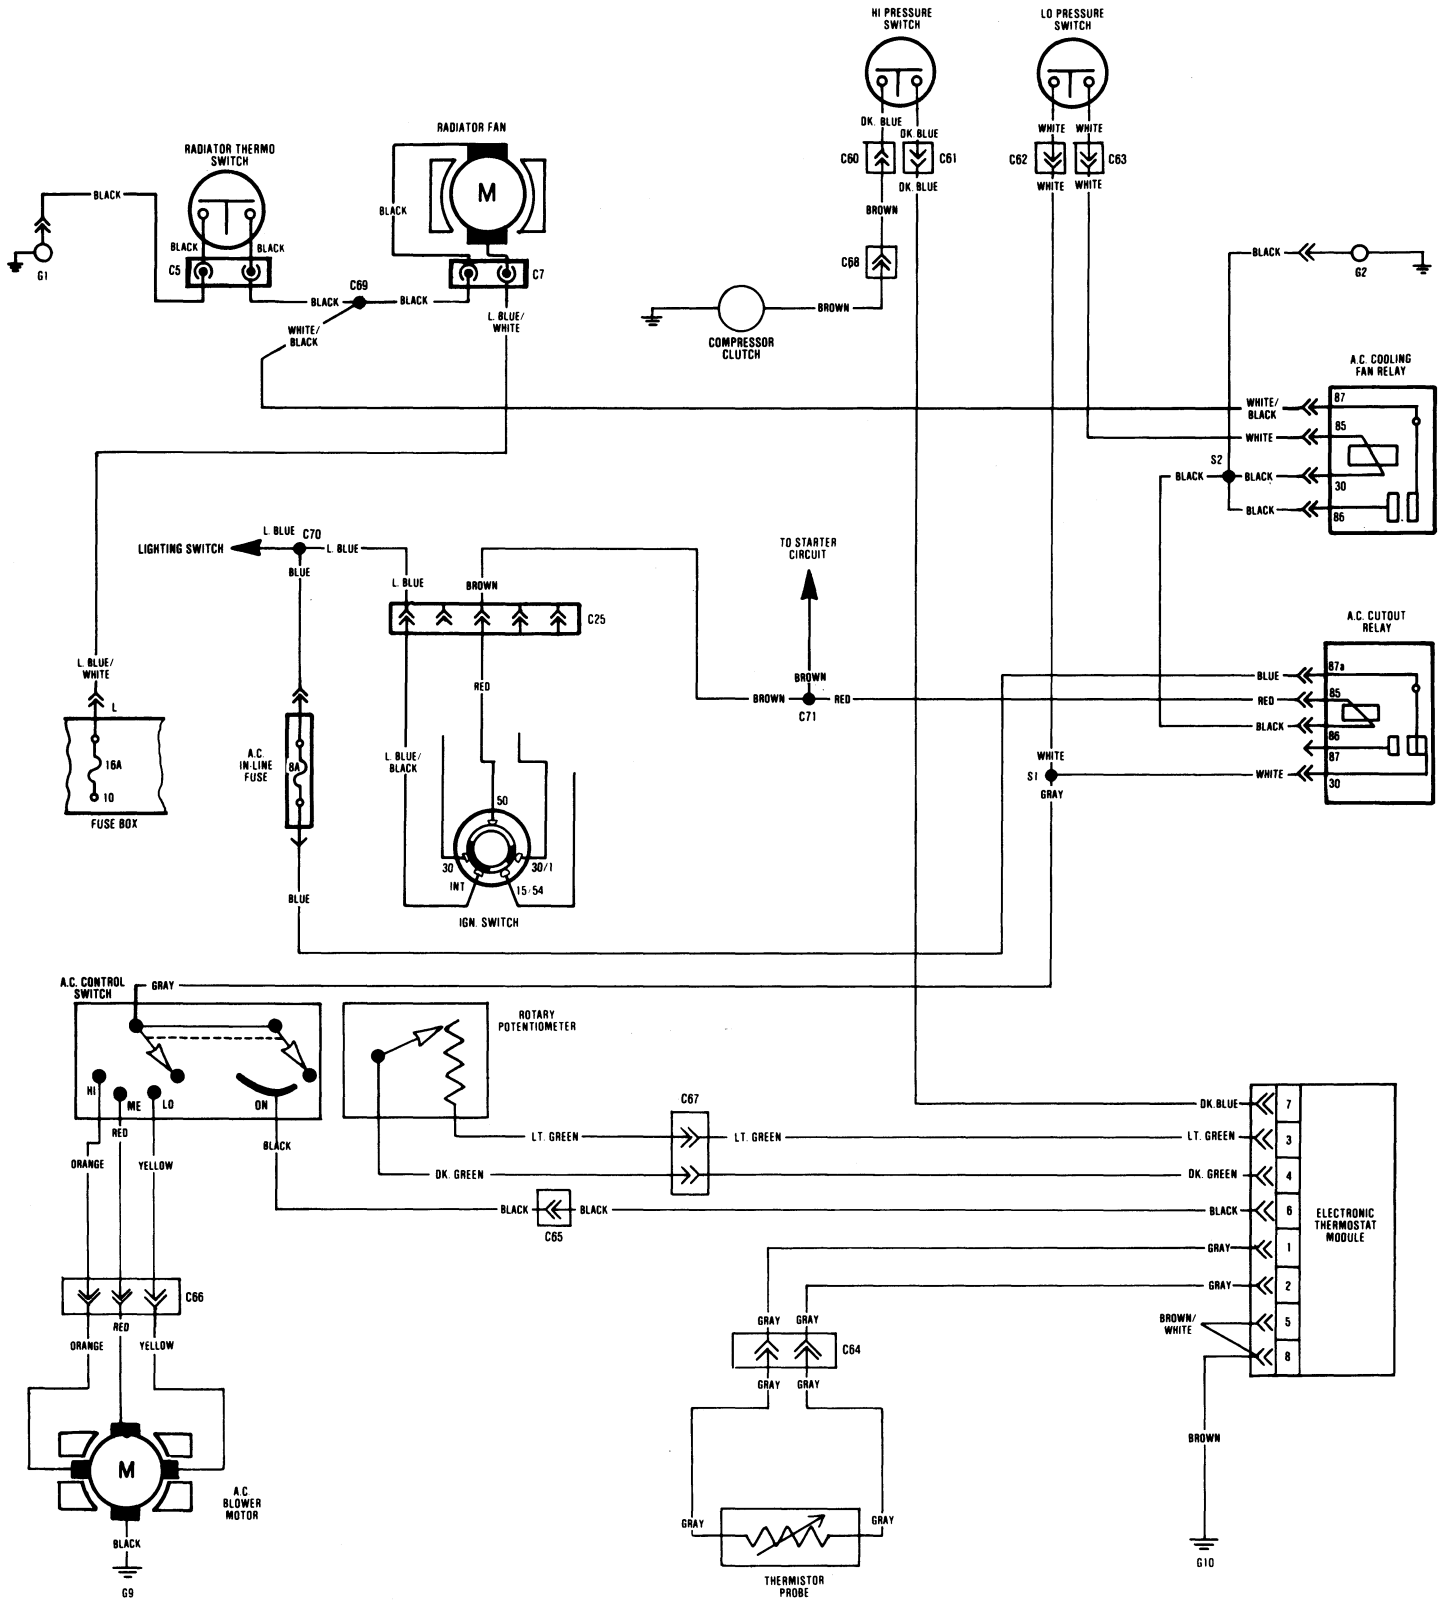


CONNECTOR CODES

CONNECTOR NUMBERS	NUMBER OF CAVITIES	CIRCUITS
C1	2	Left hand front turn and park lights
C3	2	Low and high beam — left headlight
C4	1	Left hand front side marker light
C5	2	Radiator cooling fan switch
C6	2	Windshield washer pump
C7	2	Radiator cooling fan motor
C8	1	Horns
C9	1	Power to starter solenoid
C10	1	Power to starter motor
C11	1	Power to starter solenoid
C12	1	Indicators, gauges
C13	2	Low and high beams — right headlight
C14	2	Right hand front turn and park light
C16	1	Right hand front side marker light
C17	6	Rear tail, turn, park, stop, back up and trunk lights
C18	9	Rear tail, turn, park, stop, back up lights
C19	1	Windshield wiper motor
C20	2	Windshield wiper motor
C21	2	Windshield wiper motor
C22	3	Heater fan
C23	4	Power distribution
C24	2	Ignition, remove key switch
C25	5	Ignition switch
C26	4	Turn signal switch, windshield/washer switch
C27	13	Instrument cluster
C28	9	Instrument cluster
C29	8	Instrument cluster
C30	5	Instrument cluster
C31	8	Instrument cluster
C32	5	Instrument cluster
C33	7	Instrument cluster
C34	4	Instrument cluster
C35	11	Center console
C36	12	Center console
C37	4	Digital clock
C38	2	Back up lights
C39	2	Left hand rear side marker light
C40	7	Left tail, turn signal, stop and back up lights
C41	6	Left tail, turn signal, stop and back up lights
C42	6	Right tail, turn signal, stop and back up lights
C43	2	Right hand rear side marker light
C44	5	Lambda sensor switch unit
C45	1	Radio
C46	1	Radio
C48	4	Radio
C60	1	Air conditioning
C61	1	Air conditioning
C62	1	Air conditioning
C63	1	Air conditioning

CONNECTOR NUMBERS	NUMBER OF CAVITIES	CIRCUITS
C64	2	Air conditioning
C65	1	Air conditioning
C66	3	Air conditioning
C67	2	Air conditioning
C68	1	Air conditioning
C69	1	Air conditioning
C70	1	Air conditioning
C71	1	Air conditioning
C72	1	Left hand power window
C73	1	Left hand power window
C74	1	Right hand power window
C75	1	Right hand power window

COMPONENT AND RELAY IDENTIFICATION

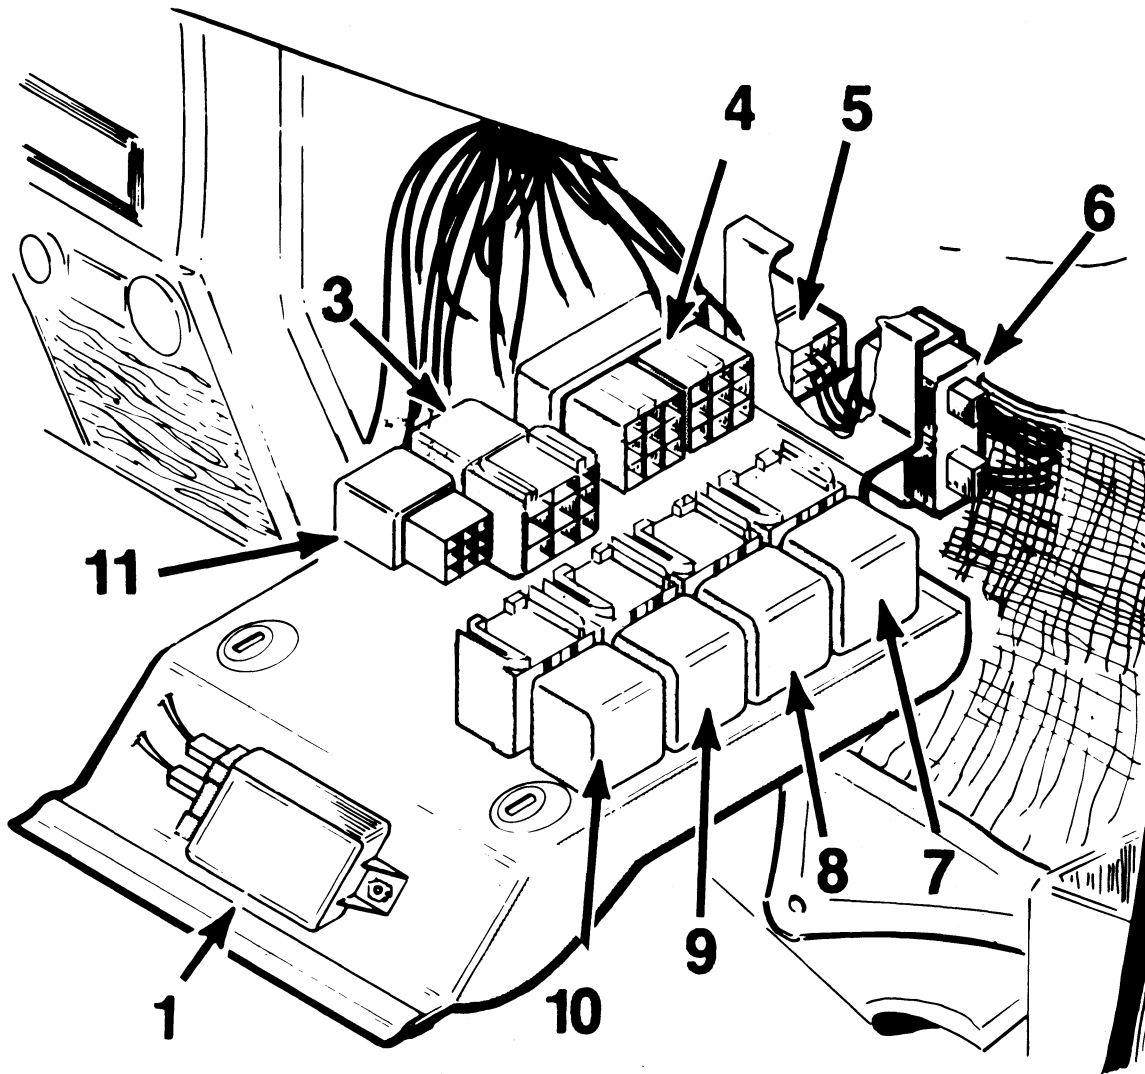

COMPONENT AND RELAY PART NUMBERS

DESCRIPTION	PART NUMBER
1. Warning chime	4454755
2. Starter relay (automatic)	4339372
3. Low beam relay	4339372
4. Fuel injection relay set (standard)	4430298
Fuel injection relay set (automatic)	4339372
5. Trunk opener relay	4320629
6. Windshield wiper delay timer	4423970
7. Seat belt relay	4413741
8. Horn relay	4339372
9. Seatbelt timer	4379249
10. High beam relay	4339372
11. Power window relay	4339372

